

JetView 1005/1007/1010 | Initial Commissioning

Initial commissioning of JV-1005, JV-1007, JV-1010

The HMIs JV-1005, JV-1007 and JV-1010 are shipped without runtime environment for JetViewSoft applications.

The description below covers the installation of „JetView Embedded Runtime STX for CE (JVER-STX-CE)“. Future updates can be installed as usual (refer to JetViewSoft online help).

For initial commissioning, download and install the file "jvsetup.cab":

- 1) To download the file "jvsetup.cab", go to <http://www.jetter.de/en/industrial-automation/support.html>
- 2) In the „Downloads“ area, navigate to [04 hmi](#) > [20 graphic](#) > [jv-1005 to 1010](#) > [initial commissioning](#)
- 3) Download the file "jvsetup.cab".
- 4) Copy it to a USB flash drive.
- 5) Power on your JV-1005/1007/1010.
- 6) Connect the USB flash drive to your JV-1005/1007/1010.
- 7) From the desktop of your touchscreen open "MyDevice" by double-clicking.
- 8) Double-click the folder "USBMemory" to open it.
- 9) Navigate to the file "jvsetup.cab" and double-click to open it.
- 10) Close the dialog box by clicking "OK".
- 11) Result: The runtime environment „JVER-STX-CE“ and the „JV Device Manager“ will be installed.
The IP address will be set to 192.168.10.15 if JVER has never been installed before.
- 12) Following power cycle, the runtime environment "JVER-STX-CE" will automatically be launched.
To terminate the program, just tap on the screen.
JetViewSoft applications can be transferred as usual.
The "JV Device Manager" on the device lets you make the usual settings.
The "JV Device Manager" lets you also switch between Landscape and Portrait screen format.